



## Device overview measuring and monitoring relays LINETRAXX®



	Page	126	129	132	135	138	141
Voltage monitoring	AC	<U, >U					
	without U <sub>s</sub>		<U, >U				
3AC	with U <sub>s</sub>						
	without U <sub>s</sub>			<U, >U			
3(N)AC	with U <sub>s</sub>				<U, >U		<U, >U, >U <sub>10min</sub> (423)
	without U <sub>s</sub>					<U, >U	<U, >U, >U <sub>10min</sub> (423H)
DC	with U <sub>s</sub>	<U, >U					
	without U <sub>s</sub>		<U, >U				
Measuring range/nominal system voltage U <sub>n</sub>	AC/DC systems 0...300 V	AC/DC systems 9.6...150 V (VME421H-D-1), 70...300 V (VMD421H-D-2)	3AC 690/500/480/440/400/230/110/100 V	(L-N) 0...288 V (L-L) 0...500 V	(L-N) 0...288 V (L-L) 0...500 V	(L-N) 0...288 V (L-L) 0...500 V	
Frequency	<f, >f	<f, >f		<f, >f	<f, >f	<f, >f	
Asymmetry/phase failure				■	■	■	
Phase sequence				■	■	■	
Current monitoring	1 AC with U <sub>s</sub>						
	3 AC with U <sub>s</sub>						
Special function							
Special applications							
Installation	DIN rail	■	■	■	■	■	
	Screw mounting	■	■	■	■	■	

145	149	152	155	160	163	165	167
<U, <<U, >U>>U, >U <sub>10min</sub>							
<U, <<U, >U>>U, >U <sub>10min</sub>							
(L-N) 0...300 V (L-L) 0...520 V							
<f, <<f, >f>>f							
■							
■							
<I, >I		<I, >I					
<I, >I		<I, >I					
RS-485 interface, Islanding detection: - ROCOF (df/dt) - Vector shift			RS-485 interface				
Interface Protection System/Decoupling protection relay				Loop monitoring	Loop monitoring	Fault voltage relay	Energy backup for device series VMD258
	■	■	■	■	■	■	
	■	■	■	■	■	■	

\* Delivery time on request