

VMD423 / VMD423H

Three-phase voltage and frequency monitor for CHPs (Combined Heat and Power plants), wind power stations, hydroelectric power plants and photovoltaic systems in accordance with DIN V VDE V 0126-1-1



VMD423 / VMD423H

Three-phase voltage and frequency monitor for CHPs, wind power stations, hydroelectric power plants and photovoltaic systems in accordance with DIN V VDE V 0126-1-1



Device features

- VMD423 with separate supply voltage
- VMD423H is supplied by the system being monitored
- Undervoltage, overvoltage and underfrequency and overfrequency monitoring in 3(N)AC systems AC 0...500 V
- Monitoring of overvoltage by average determination of the latest 10-minute measuring interval
- Asymmetry, phase failure and phase sequence monitoring
- Start-up delay, response delay and delay on release
- · Adjustable switching hysteresis
- r.m.s. value measurement (AC+DC)
- Digital measured value display via multifunctional LC display
- · LEDs: Power On, Alarm 1, Alarm 2
- Measured value memory for operating value
- · Cyclical self monitoring
- Internal test/reset button
- Two separate alarm relays (one changeover contact each)
- N/C or N/O operation and fault memory behaviour selectable
- · Password protection for device settings
- · Sealable transparent cover
- Push-wire terminal (two terminals per connection)
- Two-module enclosure (36 mm)
- RoHS compliant

Approvals



Product description

According to DIN V VDE V 0126-1-1, the voltage and frequency shall be monitored when feeding power into the public low voltage grid from private electricity generation systems > 30 kW (such as CHPs, wind power stations, hydroelectric power plants and photovoltaic systems).

The three-phase VMD423 series voltage and frequency monitors monitor the voltage and frequency at the feeding point of the public grid. At the feeding point of the medium voltage grid, the output voltages and frequencies are measured by means of voltage transformers (100 V). An alarm relay is activated within \leq 80 ms when limit values are reached (response values according to VDEW guideline "Private electricity generation systems at the medium voltage grid"). An overvoltage (> U2), measured as average value over a 10-minute period, will cause the alarm relay to switch.

The voltages are measured as r.m.s. values. In addition asymmetry, phase failure and phase sequence are monitored.

The VMD423 is suitable for multifunctional monitoring tasks and can be adapted to the requirements of the electricity supply companies.

The currently measured values are continuously shown on the LC display. The measured value causing the alarm relay to switch is saved. Due to adjustable start-up delay and delay on release, the network operator's specific requirements can be considered such as device-specific start-up procedures, short-time voltage fluctuations etc.

The VMD423 series requires a separate supply voltage, whereas the VMD423H version draws its supplies from the system.

Typical applications

- Monitoring of automatic switching points between private electricity generation power system in parallel operation with the public low voltage grid.
- Applications according to DIN V VDE V 0126-1-1 (VDE V 0126-1-1): 2006-02
- Applications according to VDEW guideline DIN V VDE V 0126-1-1: 2006-02
- Universally applicable for photovoltaic systems > 30 kW, CHPs (Combined Heat and Power plants), wind power stations and hydroelectric power plants

Function


Once the supply voltage is applied, the start-up delay "t" begins. Measured voltage and frequency values being changed during this start-up period t do not influence the alarm LEDs and the state of the alarm relays.

The devices utilise several separately adjustable measuring channels (overvoltage/undervoltage, overfrequency/underfrequency). When the measured value exceeds or falls below the response value, the time of the response delays " $t_{on \, 1/2}$ " begins. Once the response delay has elapsed, the alarm relays switch and the alarm LEDs light up. If the measuring value exceeds or falls below the release value (response value plus hysteresis) after the alarm relays have switched, the selected delay on release " t_{off} " starts. Once " t_{off} " has elapsed, the alarm relays switch back to their initial position. When the fault memory is activated, the alarm relays remain in alarm state until the reset button R is pressed. On voltage recovery, the alarm message remains active until the set start-up delay "t" has elapsed.





Operating elements

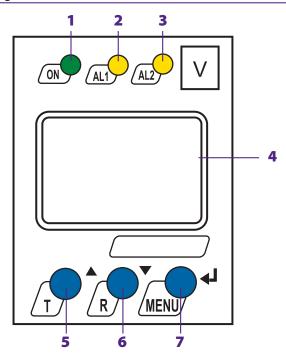

- 1 Power On LED "ON" (green): Lights up when voltage is available and when the device is in operation or flashes in case of system fault alarm.
- 2 Alarm LED "AL1" (yellow): Lights up in case of the following fault messages: > U1 / > U2 (10 minute average determination).
- 3 Alarm LED "AL2" (yellow): Lights up in case of the following fault messages: < U.

Both the alarm LEDs "AL1" and "AL2" light up in case of the following fault messages: < f / > f / Asy / PHS, the alarm LEDs flash in case of system fault alarm.

- 4 Display: Displays information on operation.
- **5** UP key (< 1.5 s) / TEST (> 1.5 s):

The UP key is used to increase input values or to navigate through the menu.

The test button "T" is used to start a manual self test.

6 - Down key (< 1.5 s) / RESET (> 1.5 s):

The Down key is used to decrease input values or to navigate through the menu.

The reset button "R" is used to activate a manual reset.

7 - Enter key (< 1.5 s) / MENU (> 1.5 s):

The Enter key is used to save input data and changed data.

Press the MENU key to call up the menu system.

Press the ESC key > 1.5 s in the menu mode: to abort an action or to return to the previous menu level. (ESC)

When the menu item LEd is activated, the alarm LED AL1 indicates that K1 is in the alarm state. When AL2 lights up, K2 is in the alarm state.

Ordering information					
Туре	Supply voltage U _S *	Nominal system voltage U _n *	Display range	Response value	Art. No.
VMD423-D-1	DC 9.694 V / AC 15460 Hz 1672 V	3(N)AC 4065 Hz/0500 V	AC 0500 V	AC 10500 V	B 7301 0020
VMD423-D-2	DC 70300 V / AC 15460 Hz 70300 V	3(N)AC 4065 Hz/0500 V	AC 0500 V	AC 10500 V	B 7301 0021
VMD423H-D-3	U_n	3(N)AC 4065 Hz/0500 V	AC 0500 V	AC 70500 V	B 7301 0022


Device version with screw terminals on request.

^{*} Absolute values

Accessories	
Туре	Art. No.
Mounting clip for screw fixing (one clip per device)	B 9806 0008




Wiring diagram VMD423

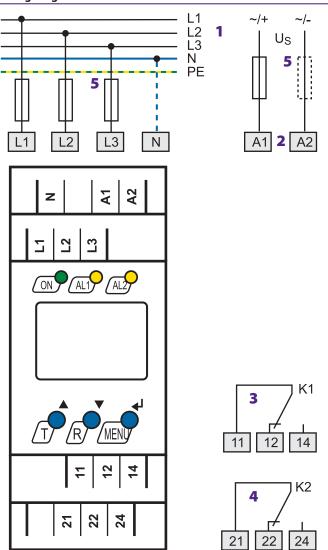

- 1 Connection to the system/load to be monitored:
- 2 Supply voltage US (see ordering information)
- 3 Alarm relay K1: Programmable for < U /> U1 /> U2 /< f /> f / Asy / PHS / ERROR
- 4 Alarm relay K2: Programmable for < U /> U1 /> U2 /< f /> f / Asy / PHS / ERROR
- 5 Fuse as line protection.6 A fuse recommended. If being supplied from an IT system, both lines have to be protected by a fuse.

Wiring diagram VMD423H

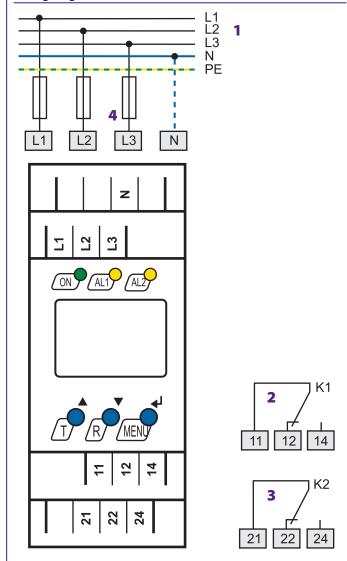

- Connection to the system to be monitored and to supply voltage
- 2 Alarm relay K1: Programmable for < U / > U1 / > U2 / < f / > f / Asy / PHS / ERROR
- 3 Alarm relay K2: Programmable for \$< U /> U1 /> U2 /< f /> f / Asy / PHS / ERROR
- 4 Fuse as line protection.6 A fuse recommended. If being supplied from an IT system, both lines have to be protected by a fuse.



Technical data

Insulation coordination acc. to IEC 60664-1/	IEC 60664-3
Rated insulation voltage	400 V
Rated impulse voltage/pollution degree	4 kV / III
Protective separation (reinforced insulation) between	een
(A1, A2) - (I	N, L1, L2, L3) - (11, 12, 14) - (21, 22, 24)
Voltage test according to IEC 61010-1:	
VMD423 and VMD423H: (N, L1, L2, L3) - (A1, A2),	
(N, L1, L2, L3) - (21, 22, 24)	
VMD423: (A1, A2) - (11, 12, 14) - (21, 22, 24)	2.21 kV
Supply voltage	
VMD423-D-1:	
Supply voltage U_s	AC 1672 V / DC 9.694 V
Frequency range U _s	15460 Hz
VMD423-D-2:	
Supply voltage U _s	AC / DC 70300 V
Frequency range U _s	15460 Hz
Power consumption	≤ 3.5 VA
VMD423H-D-3:	
Supply voltage U _s	Un
Power consumption	≤ 5 VA
Measuring circuit	
Measuring range (r.m.s. value) (L-N)	AC 0288 V
Measuring range (r.m.s. value) (L-L)	AC 0500 V
Rated frequency f _n	4065 Hz
Frequency display range	25100 Hz
Response values	
VMD423-D-1 / VMD423-D-2	
Type of distribution system	3(N)AC/3 AC (3(N)AC)*
Undervoltage < U (Alarm 2)	S(N)Ne/S Ne (S(N)Ne)
(measurement method: 3Ph/3n)	AC 10500 V / 10288 V (184)*
Overvoltage > U1 (Alarm 1)	
(measurement method: 3Ph/3n)	AC 10500 V / 10288 V (264)*
Overvoltage > U2 (Alarm 1)	, ,
(measurement method: 3Ph/3n)	AC 10288 V (253)*
Overvoltage U2	10-minute average determination
Resolution of setting U	1 V
VMD423H-D-3	
Type of distribution system	3(N)AC/3 AC (3(N)AC)*
Undervoltage < U (Alarm 2)	
(measurement method: 3Ph / 3n)	AC 70500 V / 70288 V
Overvoltage > U (Alarm 1)	
(measurement method: 3Ph / 3n)	AC 70500 V / 70288 V
Resolution of setting U	1 V
Asymmetry	530 % (30 %)*
Phase failure	by setting of the asymmetry
Phase sequence	clockwise R/anticlockwise L (R / on)*
Relative uncertainty voltage at 50 Hz / 60 Hz	± 1.5 %, ± 2 digit
Hysteresis U	140 % (5 %)*
Underfrequency< Hz	4565 Hz (47.5 Hz)*
Overfrequency > Hz	4565 Hz (50.2 Hz)*
Resolution of setting f	0.1 Hz
11	
Hysteresis frequency Hys Hz Relative uncertainty frequency 4065 Hz	0.12 Hz (0.1 Hz)* ± 0.1 %, ± 1 digit

Specified time						
Start-up delay t					0300	s (30 s)*
Response delay t _{on1/2}					030	00 s (0.1)
Delay on release t _{off}					0300 s	s (30 s)*
Resolution of setting t, t_{off} , $t_{on1/2}$ (0	10 s)					0.19
Resolution of setting t, t_{off} , $t_{on1/2}$ (10						19
Resolution of setting t, t_{off} , $t_{on1/2}$ (10.	.0300	s)				10 9
Operating time voltage tae						80 ms
Operating time frequency t _{ae}						≤ 80 ms
Response time t _{an}						+ t _{on1/2}
Recovery time t _b	6 11		// ID / 22 / I	1	≤	≤ 300 ms
Discharging time energy backup on p		ure for V	/MD423H			≥ 2.5 9
Charging time energy backup for VMI	D423H					≤ 60 s
Displays, memory						
Display		LC displ	ay, multi	functiona		
Display range measured value					AC/DC 0	
Operating uncertainty voltage at 50 H					1.5 %, ±	
Operating uncertainty, frequency 40.					± 0.1 %, :	
History memory (HiS) for the first alar	rm value		da	ata record		
Password				oπ/on/u	999 (0	
Fault memory (M) alarm relay					on/off/c	on (oπ)^
Switching elements						
Number				angeovei		
Operating principle K1 / K2				on n.o / N		
				tage > U1		
underfrequency < Hz, overfrequer K2: (device error Err, u						
underfreque						
overvoltage >						
Electrical endurance, number of cycle		III WIICI	ı startırı	JAL, N	c operation	10000
Fault memory	3				on/off/c	
Contact data acc. to IEC 60947-5-1:					011/011/0	on (on)
Utilisation category		AC 13	AC 14	DC-12	DC-12	DC-12
Rated operational voltage		230 V	230 V	24 V	110 V	220 V
Rated operational current		5 A	3 A	1 A	0.2 A	0.1 A
Minimum contact rating		371	371		at AC / D	
EMC						
EMC					IE	EC 61326
Operating temperature					- 25 °C	
Classification of climatic conditions ac	cc. to IEC	50721:				
Stationary use (IEC 60721-3-3)			condens	ation and	l formatio	on of ice
Transport (IEC 60721-3-2)				ation and		
Storage (IEC 60721-3-1)				ation and		
Classification of mechanical condition	is acc. to	EC 6072	21:			
Stationary use (IEC 60721-3-3)						3M4
Transport (IEC 60721-3-2)						2M2
Storage (IEC 60721-3-1)						1M3
Stationary use (IEC 60721-3-3) Transport (IEC 60721-3-2) Storage (IEC 60721-3-1)						2N

1M3

Connection

push-wire terminal
0.22.5 mm ² / AWG 24-14
0.22.5 mm ² / AWG 24-14
0.21.5 mm ² / AWG 24-16
10 mm
50 N
2.1 mm

Other

Operating mode	continuous operation			
Mounting	any position			
Degree of protection, internal components (IEC 60529)	IP30			
Degree of protection, terminals (IEC 60529)	IP20			
Enclosure material	polycarbonate			
Flammability class	UL94 V-0			
DIN rail mounting acc. to	IEC 60715			
Screw fixing	2 x M4 with mounting clip			
Software version	D344 V3.1x			
Operating manual	TGH1444			
Weight VMD423	≤ 150 g			
VMD423H	≤ 240 g			

()* = factory setting


Dimension diagram XM420 (VMD423)

Dimensions are given in mm Open the front plate cover in direction of arrow!

70.5


Screw mounting

Note: The upper mounting clip must be ordered separately (see ordering information

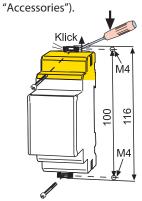


Dimension diagram XM420 (VMD423H)

Dimensions are given in mm Open the front plate cover in direction of arrow!

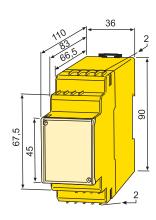

Screw mounting

Note: The upper mounting clip must be ordered separately (see ordering information "Accessories").

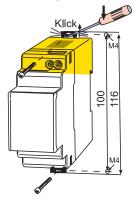



Dipl.-Ing. W. Bender GmbH & Co. KG

P.O.Box 1161 • 35301 Grünberg • Germany Londorfer Straße 65 • 35305 Grünberg • Germany Tel.: +49 6401 807-0 • Fax: +49 6401 807-259 E-Mail: info@bender-de.com • www.bender-de.com