

# VMD422 / VMD422H

Three-phase voltage and frequency monitor for CHPs (Combined Heat and Power plants), wind, hydroelectric and photovoltaic power stations in accordance with DIN V VDE V 0126-1-1



# VMD422 / VMD422H

Three-phase voltage and frequency monitor for CHPs, wind, hydroelectric and photovoltaic power stations in accordance with DIN V VDE V 0126-1-1



#### **Device features**

- VMD422 with separate supply voltage
   VMD422H is supplied by the system being monitored
- Undervoltage, overvoltage, underfrequency and overfrequency monitoring in 3(N)AC systems AC 400/230 V
- Monitoring of overvoltage by average determination of the latest 10-minute measuring interval
- Asymmetry, phase failure and phase sequence monitoring
- Factory preset according to DIN V VDE V 0126-1-1
- Adjustable start-up delay and delay on release
- Adjustable switching hysteresis for the voltage
- r.m.s. value measurement (AC)
- Digital measured value display via multifunctional LC display
- LEDs: Power On, Alarm 1, Alarm 2
- Measured value memory for operating value
- · Cyclical self monitoring
- · Internal test/reset button
- Two separate alarm relays (one changeover contact each)
- · N/C operation, fault memory deactivated
- · Password protection for device settings
- Sealable transparent cover
- Optional: screw-type or push-wire terminals
- Two-module enclosure (36 mm)
- RoHS compliant

## Certifications





#### **Product description**

According to DIN V VDE V 0126-1-1, the voltage and frequency shall be monitored when feeding power into the public low voltage grid from decentralised power generation systems >30 kW (such as CHPs, wind, hydrodynamic and photovoltaic power plants).

The three-phase voltage monitors of the VMD422 series continuously monitor the voltage and frequency at the transfer connection point in 3AC/3NAC systems and activate an alarm relay within 180 ms (response values according to VDEW guideline "Generator at the public low-voltage grid") if voltage and frequency exceed upper and lower limits. An overvoltage (> U2), measured as average value over a 10-minute period, will cause the alarm relay to switch.

The voltages are measured as r.m.s. values. In addition asymmetry, phase failure and phase sequence are monitored.

The response values are preset according to DIN V VDE V 0126-1-1 and are password protected and can only be changed after entering a valid password. The network operator can adjust them according to the given requirements considering the permissible limit ranges specified in the standard.

The currently measured values are continuously shown on the LC display. The measured value leading to the activation of the alarm relays will be stored. Due to adjustable start-up delay and delay on release, the network operator's specific requirements can be considered such as device-specific start-up procedures, short-time voltage fluctuations etc.

Device version VMD422 requires a separate supply voltage, whereas device version VMD422H is supplied by the system.

#### **Typical applications**

- Monitoring of automatic switching points between decentralised power generating system in parallel operation with the public low voltage grid.
- Applications according to DIN V VDE V 0126-1-1 (VDE V 0126-1-1): 2006-02
- Universally applicable for photovoltaic systems > 30 kW, CHPs (Combined Heat and Power plants), wind and hydrodynamic power plants

#### Function


Once the supply voltage is applied, the start-up delay "t" is activated. Measured voltage and frequency values being changed during this start-up period t do not influence the alarm LEDs and the state of the alarm relays.

The devices utilise several separately adjustable measuring channels (overvoltage/undervoltage, overfrequency/underfrequency). When the measured value exceeds or falls below the response value, the alarm relays switch and the alarm LEDs light up. If the measuring value exceeds or falls below the release value (response value plus hysteresis) after the alarm relays have switched, the selected release delay "toff" begins. When "toff" has elapsed, the alarm relays switch back to their initial position. When the fault memory is activated, the alarm relays remain in alarm state until the reset button R is pressed. On voltage recovery, the alarm message remains active until the set start-up delay "t" has elapsed.





### **Operating elements**

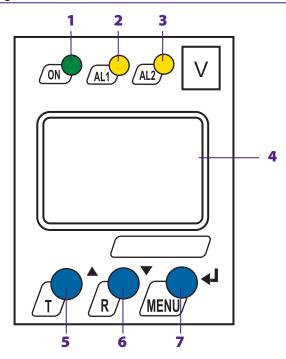

- 1 Power On LED "ON" (green): Lights up when voltage is available and when the device is in operation or flashes in case of system fault alarm.
- 2 Alarm LED "AL1" (yellow): Lights up in case of the following fault messages: > U1 / > U2 (10 minute average determination).
- 3 Alarm LED "AL2" (yellow): Lights up in case of the following fault messages: < U.

Both the alarm LEDs "AL1" and "AL2" light up in case of the following fault messages: < f / > f / Asy / PHS, the alarm LEDs flash in case of system fault alarm.

- 4 Display Shows information on operation.
- 5 UP key (< 1.5 s) / TEST (> 1.5 s):

The UP key is used to increase input values or to navigate through the menu.

The TEST button is used to start a manual self test.

6 - DOWN key (< 1.5 s) / RESET (> 1.5 s):

The DOWN key is used to decrease input values or to navigate through the menu.

The RESET button is used to activate a manual reset.

**7** - ENTER key (< 1.5 s) / MENU (> 1.5 s):

The ENTER key is used to save input data and changed data.

Press the MENU key to call up the menu system.

Press the ESC key > 1.5 s in the menu mode:

to abort an action or to return to the previous menu level.


Ordering information						
Туре	Supply voltage U <sub>S</sub> *	Nominal system voltage Un*	Connection	Art. No.		
VMD422-D-2	AC 15460 Hz 70300 V / DC 70300 V	3(N)AC 400 / 230 V 4065 Hz	screw-type terminals	B 9301 0011		
VMD422-D-2	AC 15460 Hz 70300 V / DC 70300 V	3(N)AC 400 / 230 V 4065 Hz	push-wire terminals	B 7301 0011		
VMD422H-D-3	Un	3(N)AC 400 / 230 V 4065 Hz	screw-type terminals	B 9301 0012		
VMD422H-D-3	Un	3(N)AC 400 / 230 V 4065 Hz	push-wire terminals	B 7301 0012		

<sup>\*</sup>Absolute values of the voltage range


Accessories				
Туре	Art. No.			
Mounting clip for screw fixing (one clip per device)	B 9806 0008			



### Wiring diagram VMD422

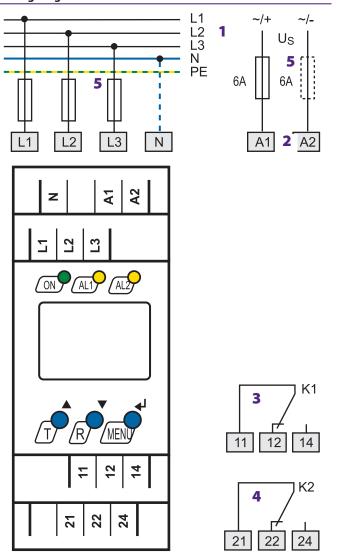

Wiring diagram VMD422H

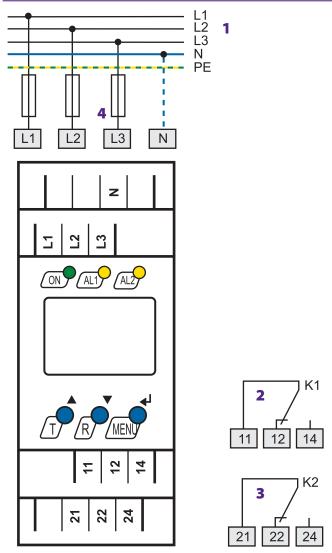

- 1 Connection to the system being monitored
- 2 Supply voltage US (see ordering information)
- 3 Alarm relay K1: for < U / > U1 / < f / > f / Asy
- 4 Alarm relay K2: for < U / > U1 / > U2 / < f / > f / Asy / PHS / ERROR
- **5** Fuse as line protection.
- 6 A fuse recommended. If being supplied from an IT system, both lines have to be protected by a fuse.
- 1 Connection to the system being monitored and to the supply voltage
- **2** Alarm relay K1: for < U /> U1 /< f/> f/Asy
- 3 Alarm relay K2: for < U / > U1 / > U2 / < f / > f / Asy / PHS / ERROR
- 4 Fuse as line protection.



# **Technical data**

Insulation coordination acc. to IEC 60664-1/IEC 60	
Rated insulation voltage Rated impulse voltage/pollution degree	400 V 4 kV / III
Protective separation (reinforced insulation) between	4 KV / III
·	, L2, L3) - (11, 12, 14) - (21, 22, 24)
	, LZ, LJ) (11, 12, 14) (21, 22, 24,
Voltage test according to IEC 61010-1: VMD422 and VMD422H:	
VMD422 and VMD422H: (N, L1, L2, L3) - (A1, A2), (11, 12, 14)	3.32 k\
(N, L1, L2, L3) - (A1, A2), (11, 12, 14) (N, L1, L2, L3) - (21, 22, 24)	2.21 k\
VMD422:	2.21 KV
(A1, A2) - (11, 12, 14) - (21, 22, 24)	2.21 k\
	2.21 K
Supply voltage	
VMD422-D-2:	
Supply voltage U <sub>s</sub>	AC / DC 70300 \
Frequency range U <sub>s</sub>	15460 Hz
Eigenverbrauch	≤ 3.5 VA
VMD422H-D-3:	
Supply voltage U <sub>S</sub>	U <sub>r</sub>
Power consumption	≤ 5 VA
Measuring circuit	
Measuring range (r.m.s. value) (L-N)	AC 0288 V
Measuring range (r.m.s. value) (L-L)	AC 0500 V
Rated frequency f <sub>n</sub>	4065 Hz
Frequency display range	10500 Hz
Response values	
Type of distribution system	3(N)AC/3 AC (3(N)AC)*
Overvoltage > U1 (Alarm 1) (measurement method: 3P AC 423	380 V/184218 V (3n: AC 184 V) <sup>3</sup> Ph/3n ) 460 V/244264 V (3n: AC 264 V) <sup>3</sup>
Overvoltage > U2 (Alarm 1) (measurement method: 3P	²h/3n ) 460 V/253264 V (3n: AC 253 V)*
Overvoltage U2	10-minute average determination
Resolution of setting U	1 \
Asymmetry, permanently set	(30 %)*
Phase failure	detection of asymmetry
Phase sequence, permanently set	(on, clockwise rotation)*
Relative uncertainty, voltage at 50 Hz	±1.5 %, ±1 digi
Hysteresis U	15 % (5 %)*
Underfrequency< Hz	47.549.8 Hz (47.5 Hz)
Overfrequency> Hz	50,252,0 Hz (50.2 Hz)*
Resolution of setting f	0.1 Hz
Hysteresis frequency Hys Hz, permanently set	(0.1 Hz)*
Relative uncertainty, frequency range 4065 Hz	±0,1 %, ±1 digi
Specified time	
Start-up delay t	0300 s (30 s)*
Delay on release t <sub>off</sub>	0300 s (30 s)*
Resolution of setting t, t <sub>off</sub> (010 s)	0.1 :
Resolution of setting t, t <sub>off</sub> (1099 s)	1:
Resolution of setting t, t <sub>off</sub> (10.0300 s)	10:
Operating time voltage tae	≤ 180 m:
Operating time frequency tae	≤ 180 m:
Response time tan	$t_{an} = t_{ae} + t_{on1/2}$
Recovery time t <sub>b</sub> Discharging time energy backup on power failure for VI	$ \leq 300 \text{ m} $ $ \leq 300 \text{ m} $ $ \geq 2.5 $
	VID422⊓ ≥ 2.5 S ≤ 60 S
Charging time energy backup for VMD422H	

Displays, memory					
Display	LC	display, m	ultifunctio	nal, not ill	uminated
Display range measured value				AC C	500 V
Operating uncertainty voltage at 50 Hz	Z			± 1.5 %,	± 1 digit
Operating uncertainty frequency in the frequency range 4065 Hz				± 0.1 %,	± 1 digit
History memory (HiS) for the first alarn	m value		data reco	rd measur	ed values
Password			Off/on	/0999 (	on/126)*
Fault memory (M) alarm relay				on/off/c	on (OFF)*
Switching elements					
Number		2 x 1	changeov	er contact	s (K1, K2)
Operating mode K1/K2, permanently set				N/C op	eration n.c
	K1: (undervo	ltage < U, c	overvoltage:	> U1, asym	metry Asy,
	erfrequency <				
K2: ( device erro					
underfrequency < Hz, overfrequency > Hz, p		e PHS , over	voltage > U	12, N/C opera	
Electrical endurance, number of cycles					10000
Fault memory				on/off/c	on (OFF)*
Contact data acc. to IEC 60947-5-1:			26.40	20.10	20.12
Utilisation category	AC 13	AC 14	DC-12	DC-12	DC-12
Rated operational voltage	230 V	230 V	24 V	110 V	220 V
Rated operational current	5 A	3 A	1 A	0.2 A	0.1 A
Minimum contact load			1 r	nA at AC/[	)C ≥ 10 V
Environment/EMC					
EMC					EC 61326
Operating temperature				- 25 °C.	+ 55 ℃
Classification of climatic conditions acc					
Stationary use (IEC 60721-3-3)			ensation a		
Transport (IEC 60721-3-2)			ensation a		
Storage (IEC 60721-3-1)			ensation a	nd formati	on of ice)
Classification of mechanical conditions	acc. to IEC	50/21:			2144
Stationary use (IEC 60721-3-3)					3M4
Transport (IEC 60721-3-2)					2M2
Storage (IEC 60721-3-1)					1M3
Connection					
Connection (Art. No. B 9) Connection properties:			30	rew-type	terminais
rigid/flexible/conductor sizes	(	12 4/0	.22.5 m	nm² (AWG	24 12)
Multi-conductor connection (2 conduc					2712)
rigid/flexible				1.5 / 0.2	.1.5 mm <sup>2</sup>
Stripping length			0.2		9 mm
Tightening torque				0.6 Nm	
Connection type (Art. No. B 7)	push-wire terminals				
Connection properties:					
rigid/flexible		0	.22.5 m	nm² (AWG	2414)
flexible with ferrule			.21.5 m		
Stripping length					10 mm
Opening force					50 N
Test opening, diameter					2.1 mm
Other					
Operating mode			CC	ntinuous	operation
Mounting					, position

Operating mode	continuous operation
Mounting	any position
Degree of protection, internal components (IEC 60529)	IP30
Degree of protection, terminals (IEC 60529)	IP20
Enclosure material	polycarbonate
Flammability class	UL94 V-0
DIN rail mounting acc. to	IEC 60715
Screw fixing	2 x M4 with mounting clip
Software version	D313 V3.0x
Operating manual	TGH1431
Weight VMD422	≤ 150 g
Weight VMD422H	≤ 240 q

( )\* = factory setting

# Dimension diagram XM420 (VMD422)


Dimensions are given in mm Open the front plate cover in direction of arrow!

67,5

45

#### **Screw fixing**

Note: The upper mounting clip must be ordered separately (see ordering information).

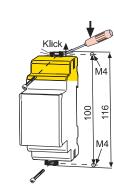



# Dimension diagram XM420 (VMD422H)

Dimensions are given in mm Open the front plate cover in direction of arrow!

# **Screw fixing**

Note: The upper mounting clip must be ordered separately (see ordering information).

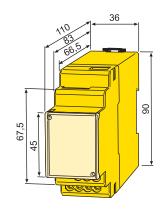

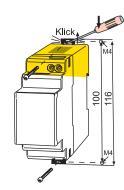



#### Dipl.-Ing. W. Bender GmbH & Co. KG

P.O.Box 1161 • 35301 Grünberg • Germany Londorfer Straße 65 • 35305 Grünberg • Germany Tel.: +49 6401 807-0 • Fax: +49 6401 807-259 E-Mail: info@bender-de.com • www.bender-de.com